

ARTISAN #4: CONFIGURING TOOLS EXTRAS

Delta BT and Smoothing


By: Susan at <http://www.hukyforum.com/>
You may use this under the CC BY-NC-ND license.
(See <http://creativecommons.org/licenses/by-nc-nd/4.0/> for details.)

ROR/ Rate of Rise /Delta BT

These are all the same thing. To see them you turn them on in Tools > Extras.
Delta ET and Delta BT have been selected to show as both curves on the graph and also in LCDs on the right side of the page.

SMOOTHING

That smoothing of 10 on the Deltas is really too high, but at least you can see where it is done. "2" would be more appropriate.

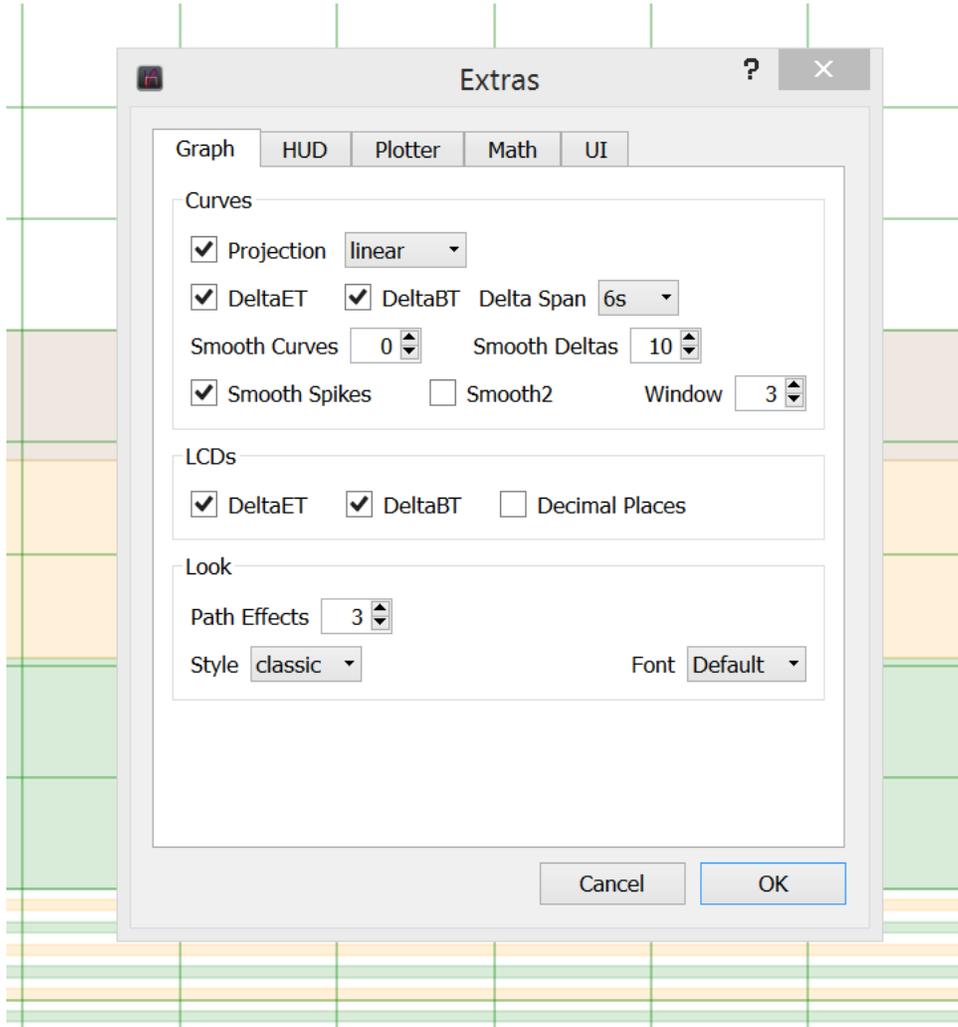

To chose the colors of the lines for the curves? Where else but Config > Colors ??

